

UPDATE PROCEDURE

- Using this update disc, you will be able to update your DVD recorder according to the following procedure.
- Only the buttons on front panel should be used for all operations in this procedure.
- 1)-4) are the descriptions of customer operation, 5)-9) are the descriptions of your DVD recorders' status.
- Recorded titles, user setting data, and received EPG data do not disappear by this update.

CAUTION

- It will take about 6 minutes to update.
- The disc tray will automatically open during update.
Please remove any masking in front of the disc tray before update.
- Other operations will not be made during update.

PROCEDURE

- 1) Power on your DVD recorder by pressing "POWER" button.
- 2) Press "OPEN/ CLOSE" (DVD OPEN/CLOSE) button to open the disc tray.
- 3) Place this update disc on the disc tray.
- 4) Press "OPEN/ CLOSE" (DVD OPEN/CLOSE) button to close the disc tray.
- 5) Do not perform any operations until update completes.
When update starts, a screen will disappear and it will become a black screen.
When your DVD recorder was already updated, the update will not start.
Since your DVD recorder is not necessary to update, please remove the update disc.

- 6) The update starts.
"LOAD" appears and display changes as follows after a while.

DOWNLOAD-1

- 7) After a while, since the disc tray is ejected, please remove the update disc.
Do not push the disc tray, please leave your DVD recorder as it is.

- 8) Continuously, display changes as follows.

DOWNLOAD-2



DOWNLOAD-3



DOWNLOAD-4



DOWNLO ***



DOWNLOAD-5



DOWNLOAD-6

↓ HX models

- 9) Update completes now.

When "WRT FAILED" or "Can'T USE" appears, once power off your DVD recorder and update from the top.